

Emergency Exit Sign Lighting

Version „SIGMA“




Installation instruction

1 Mounting Lamp on the wall or the ceiling

Type of mounting	Mounting	Dimension Base plate
<p>Wall mounted/ Surface mounted/ Cable mounted</p>	<ol style="list-style-type: none"> Fix the base plate to the ceiling/wall with 2 suitable screws (d = 4 mm). In practice, the cable exit is possible in the entire area below the mounting plate base (200 x 60 mm²). Ideally, the cable exit of the wall / ceiling is located in the area of the cable entry opening of the lamp centre (25 x 40 mm²), 92.5 mm to the left. Then wire the base plate. The terminal enables through-wiring from lamp to lamp with a maximum cross-section of 2.5 mm². Fit the lamp onto the base plate. Place the lamp straight on the base plate, press the spring bolts in the base plate with both index fingers simultaneously and carefully press the lamp until the spring bolts engage in the holes provided. * Adjust cable length by means of the cable stoppers. The cables are set to maximum length on delivery and can be inserted approx. 5 cm into the lamp housing * For cable mounted lamps only. 	

3 Pin assignment terminal of lamp

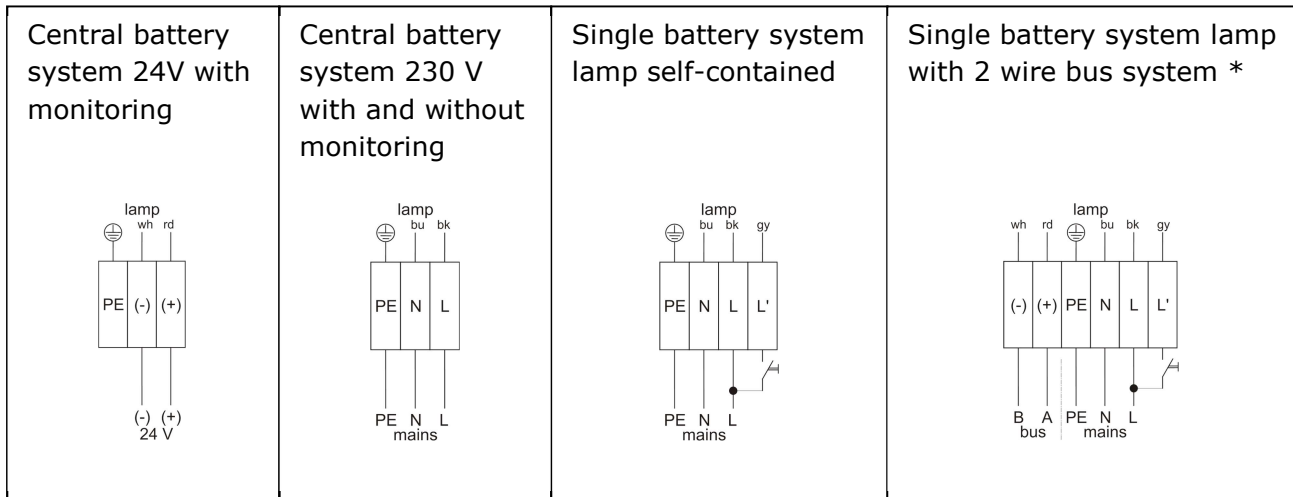


* Note: Record place of lamp and sequence of barcode at single battery system with monitoring or remove barcode sticker from control gear and store
 Example: Staircase 1th floor
 5502110209230028

4 Addressing

* Only required for battery systems with monitoring single lamps (Central battery system 24 V / 230 V with monitoring, clause 3)

Causes for flashing light sources (LED)

- Invalid address (0 or >20)
 - Set valid address
 - Following, power off short time
- Calibration note is set
 - Put lamp in DC – mode or
 - Run calibration at central battery system

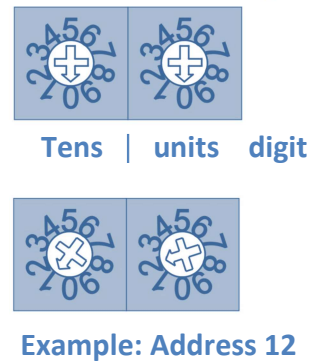

5 Finishing

- Choose pictogram needed
- Remove the pins with a suitable tool and fix the pictogram needed with the pins

Forchheim und Willing GmbH

Südstraße 21
 09221 Neukirchen / Erzgebirge - Germany

Phone: 0049 371 27816-0
 Fax: 0049 371 27816-29
 E-Mail: info@forchheim-willing.de
 Internet: www.forchheim-willing.de